




MRD CAMERA UPGRADES

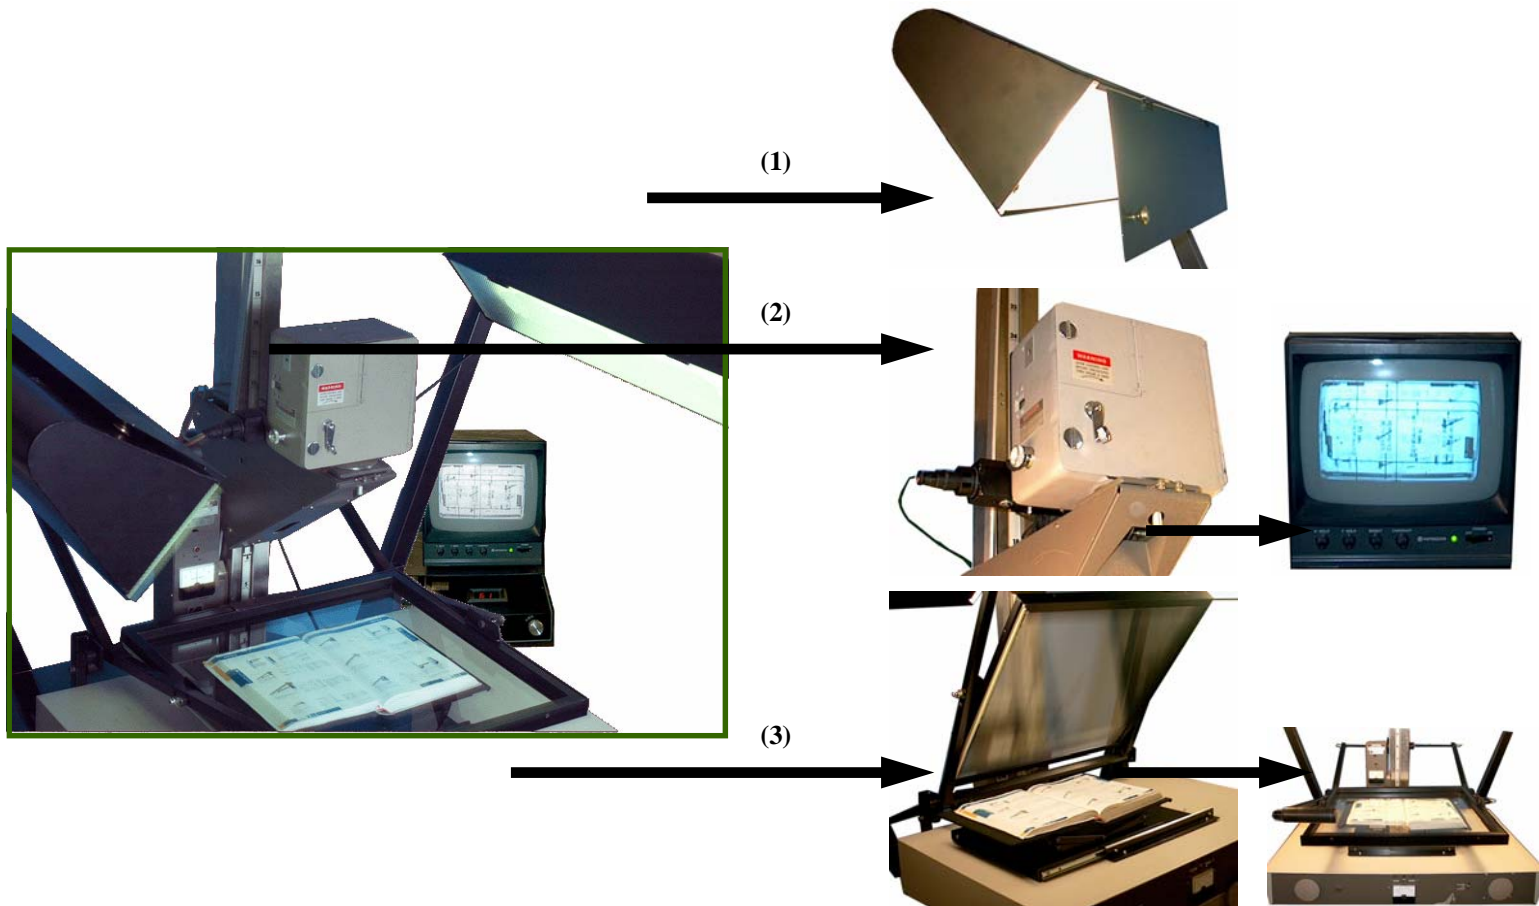

ICAM BRINGS THE MRD INTO THE 21ST CENTURY

- (1) The addition of **high frequency cold fluorescent lighting** has the following benefits.
 - a) Lower working light levels. Prolonged lamp life and reduced power consumption
 - b) Cooler temperatures for both operator and documents.
 - c) Better contrast and reduced glare gives improved resolution.
 - d) Fully controllable, using existing MRD light sensor and a digital display.
- (2) **Through the lens video document alignment.** Removes the finder light function and replaces it with constant display of the document on a video monitor. The integral masking and pull through functions remain fully operational.
- (3) **Counter balanced top glass, book cradle and integrated book shuttle.** This low profile unit provides convenient and gentle book handling .

Icam Archive Systems Ltd.

3 The Old Mill, Blisworth Hill Barns, Stoke Road, Blisworth, Northamptonshire NN7 3DB
Telephone: +44 (0)1604 859700 Fax +44 (0)1604 859563
www.icamarchive.co.uk sales@icamarchive.co.uk